



ASUS UX50V-RX05 Keyboard Replacement

Replace the broken keyboard on your Asus Laptop

Written By: James



INTRODUCTION


This is how you remove the keyboard on an Asus UX50V-RX05 Laptop.



TOOLS:

- [iFixit Opening Tools](#) (1)
-


Step 1 — Keyboard

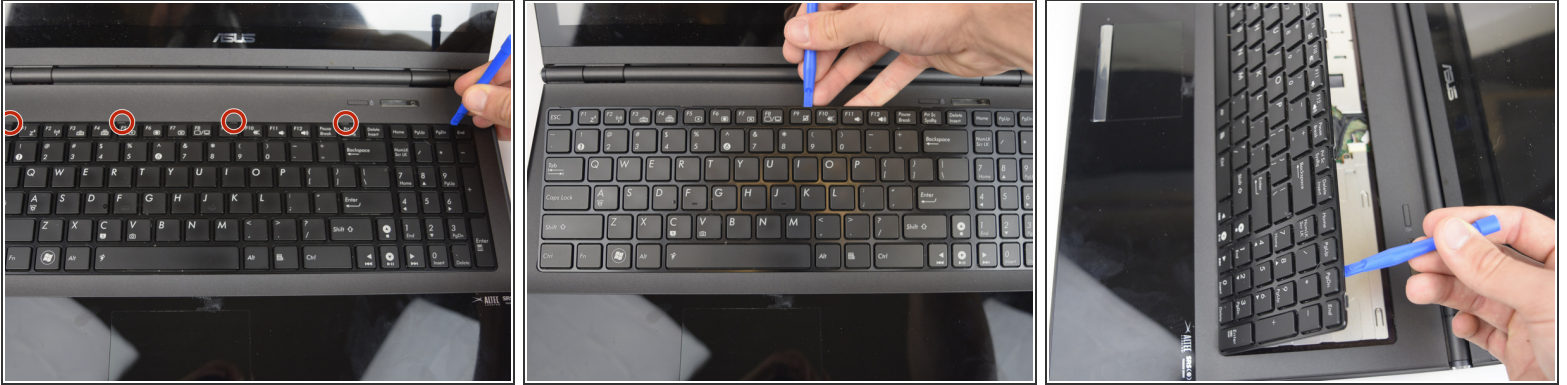

 Make sure the device is powered off before beginning.


- Use the Plastic Opening tool to pry the five slots up at the top of the keyboard.

Step 2

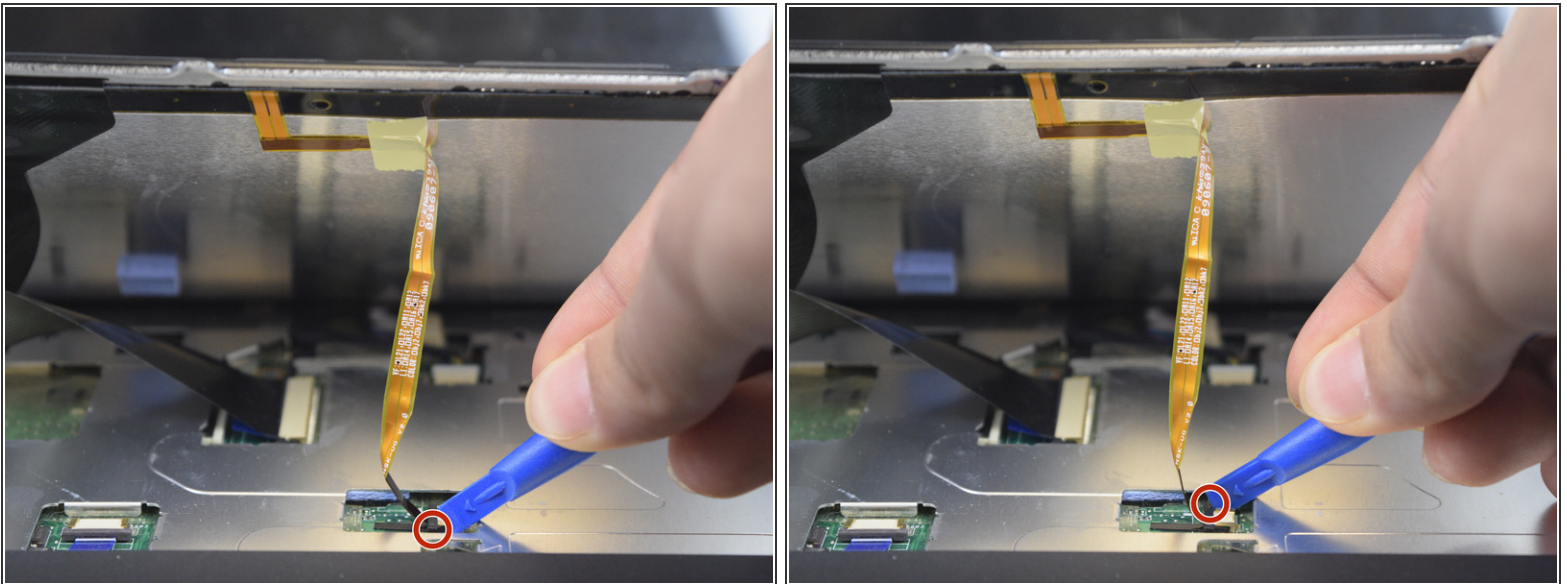

- Lift the keyboard slowly but not all of the way out.
- Use the Plastic Opening tool to open the two black clips on each side of the connecting cords, (LCD flex cable and flex band).
- After pushing each end of the clips out, towards the entering cable, you can then pull out the cable.

Step 3

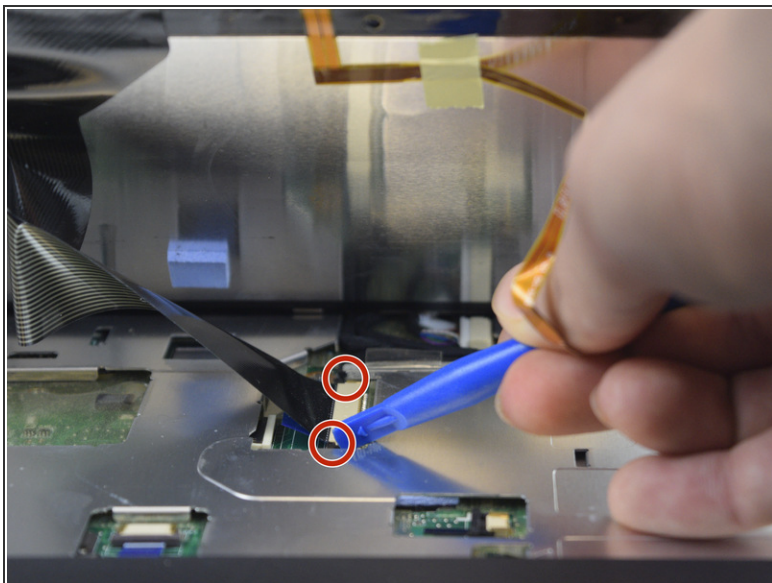

- Push out each end of the black clip with a plastic opening tool or nylon spudger to remove the ribbon cable.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-18 07:41:42 PM.